



HINO Australia

GA32012001
(P2HN9312SY)



Fitting Guide

HINO 300 STANDARD CAB

MY20on Models

2 Post Nudge Bar
VEHICLE FRONTAL PROTECTION SYSTEM (VFPS)
FOR AIR BAG & ADR COMPLIANT VEHICLES

Index

Pages 2-3

Index and Model Check

Pages 4-5

| | |
|---------|---------------------------|
| Stage 1 | Vehicle Preparation |
| Stage 2 | Bumper mount bolt removal |
| Stage 3 | Steel mount installation |
| Stage 4 | Bullbar Installation |
| Stage 5 | Number plate installation |

Pages 6-7

Supplied Product Assemblies
Fitting Kit
Torque Guide
Finished Product

NOTE: These instructions are to be used as a guide for installation of this component to the specified HINO model. Please ensure you check the component is applicability before installation. This work should be done by a qualified installer/technician and all care must be taken to ensure all steps are completed. Failure to do so may risk conformity to HINO component warranty and/or compliance. If you have any issues or concerns with this installation please contact 1300 01 HINO.

-
- This product is designed to be installed on the following model codes.
 - Please ensure the vehicle you are working on is listed below.
 - If not please contact your parts manager before you proceed

| Model description | Model code |
|--------------------------|-------------------|
| STD CAB | XZU605 / 655 |
| STD CAB - TRADE ACE | XZU605 / 655 |

GA3612001

Stage 1

- Park the vehicle on level ground and apply the park brake.
- Check installation hardware and read fitting instructions before commencing.
- Lift bonnet.



Stage 2

- Remove outer two (2) 10mm head bolts from bumper opening (per/side).



Stage 3

- Fit steel mounting bracket onto bumper plate and fix with M8 x 1.25 x 35mm bolts, spring washer and flat washer.
- Align mount measurement to match the alloy mount measurement.
- Ensure mounts are vertical.
- Tighten all bolts.



HINO 300 STANDARD CAB

Stage 4

- Fit bull bar onto steel mounting bracket using M10 x 1.5 x 40mm bolts, flat washers, spring washers and nuts.
- Align bull bar and tighten all bolts.



Stage 5

- Refit number plate in position with M5 x 12 bolts and nyloc nuts.



GA3612001

Supplied Product Assemblies

Fig.1 - 1x Bullbar assembly

Fig.2 - 1x Pair steel mounting brackets (Fitted to Bar)

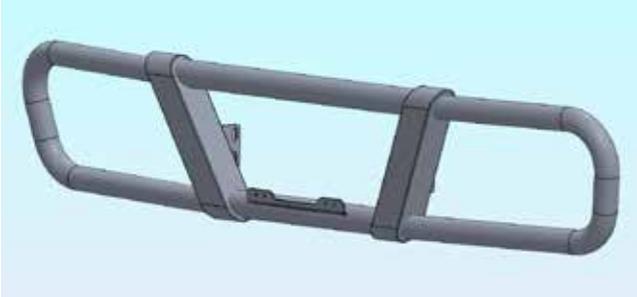


Figure 1 - Bullbar assembly

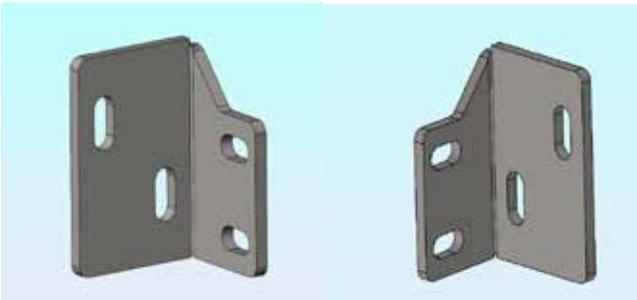


Figure 2 - 1 Pair Steel mounting brackets (fitted to bar)

Fitting Kit

Fitting Kit

| | |
|-----------------------------------|---------------------------------|
| 1 - Pair steel mount brackets | 4 - M8 x 1.25 x 35mm bolt |
| 4 - M10 x 1.5 x 40mm bolts | 4 - 5/16 x 1 x 16g flat washers |
| 8 - M10 flat washers (Heavy Duty) | 4 - M8 spring washers |
| 4 - M10 spring washers | 2 - M5 x 12 Stainless bolts |
| 4 - M10 x 1.5 nuts | 2 - M5 Stainless Nyloc nuts |

Torque Guide

| Diameter | Thread Pitch | Recomended Assembly Setting | |
|----------|--------------|-----------------------------|-----------|
| M8 | 1.25mm | 22 Nm | 16.3 lbft |
| M10 | 1.5mm | 50 Nm | 37 lbft |

Finished Product



REPLACES: 03.06.20

REVISED: 22.07.20

