

GA30002005 Fitting Instruction

DUTRO WIDE CAB 2001-2006



Step 1.

- Remove front bumper by removing the six (6) 8mm bolts in the front air vent holes.
- Discard bolts.



Step 2.

- Remove tow hook from passenger side.
- Discard bolts and tow hook.



Step 3.

- Remove steel mounting bracket from bullbar.
- Attach steel mounting bracket using six (6) M8 x 25mm bolts and washers to front of chassis as shown.

NOTE – LEAVE BOLTS LOOSE UNTIL FINAL ADJUSTMENT



Step 4.

- Attach mount to passenger side front hole using one (1) $\frac{1}{2}$ x $1\frac{1}{2}$ bolt and nyloc nut with flat washers.
- Attach mount to passenger side rear hole using one (1) M14 x 50mm bolt, spring and flat washer to captive nut in chassis rail.

NOTE – LEAVE BOLTS LOOSE UNTIL FINAL ADJUSTMENT

GA30002005 Fitting Instruction


DUTRO WIDE CAB 2001-2006



Step 5.


- Attach mount to driver's side using one (1) 1/2 x 1 1/2 bolt and nyloc nut with flat washers.

NOTE – LEAVE BOLTS LOOSE UNTIL FINAL ADJUSTMENT

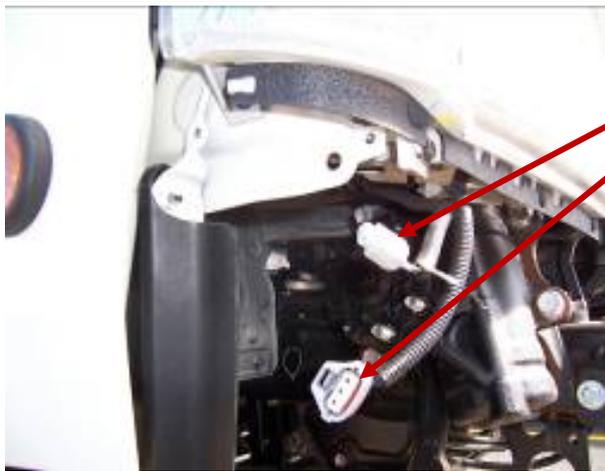


Step 6.

- Disconnect harness plugs from indicator lamp and parker lamp as shown.

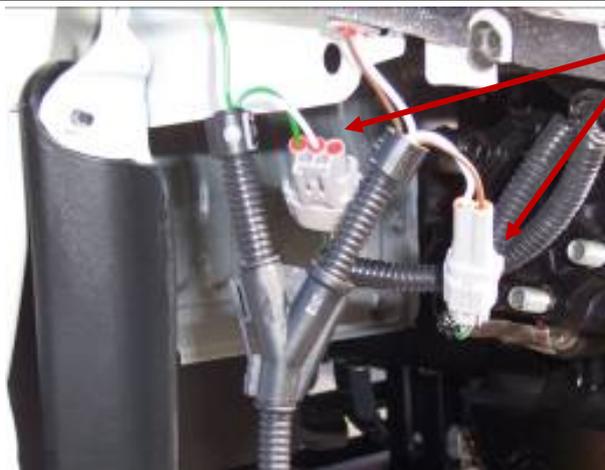

Step 7.

- Connect wiring harness supplied to both lamps then connect the original harness to the supplied harness as shown.

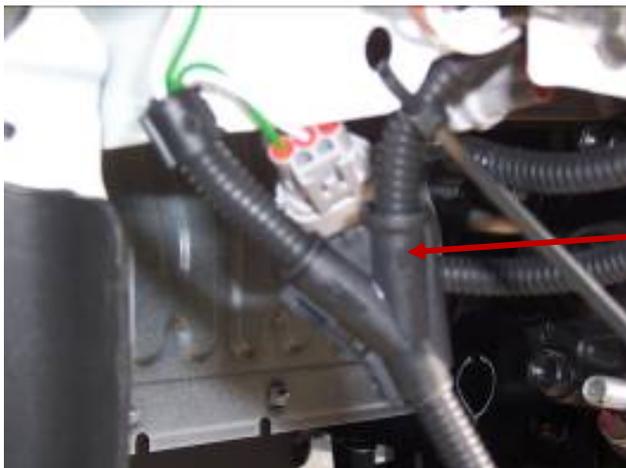

Step 8.

- Cable tie harness to hole in body so plugs do not hang low as showing in photo.
- Allow enough cable for tilting of bullbar and cab.

NOTE – DRIVER AND PASSENGER SIDE ARE THE SAME

GA30002005 Fitting Instruction

DUTRO WIDE CAB 2001-2006



	<p>Step 9.</p> <ul style="list-style-type: none">• Attach bullbar to mount using two (2) eyebolts and washers previously removed. <p>NOTE – LEAVE BOLTS LOOSE UNTIL FINAL ADJUSTMENT</p>
	<p>Step 10.</p> <ul style="list-style-type: none">• Locate pivot points and fit two (2) 9/16 x 2½ bolts, two (2) nyloc nuts and four (4) flat washers.• Tighten nyloc nuts enough to engage the nyloc and still allow the bullbar to pivot on the bolts.
	<p>Step 11.</p> <ul style="list-style-type: none">• Tighten front eyebolts and align the bullbar parallel to front of cabin and check height at either side.
	<p>Step 12.</p> <ul style="list-style-type: none">• First tighten side bolts of mounts.• Check bullbar alignment to vehicle again.• Once all aligned and both side bolts are tightened then proceed to tighten front M8 bolts.

GA30002005 Fitting Instruction

DUTRO WIDE CAB 2001-2006



Step 13.

- Remove eyebolts and lower bullbar.
- Connect wiring harness to indicator / park lamps.



Step 14.

- Place Tilt bullbar warning label on passenger side new cab lifting handle.



Step 2.

- Raise bullbar and lock into position.
- Check cabin and bullbar lamp function.

**GA30002005 Fitting Instruction
DUTRO WIDE CAB 2001-2006**



FITTING KIT

P/N GA30002005

P/N B3HN6002SY

Qty	Length	Diameter	Thread Pitch	Description
6	25mm	8mm		Metric Bolt Grade 8H/T
6		8mm		Flat Washer
2	1 1/2"	1/2"	UNC	Bolt Grade 8H/T
2		1/2"	UNC	Nyloc Nut
4		1/2"		Flat Washer
1	50mm	14mm	1.50mm	Metric Bolt Grade 8H/T
1		14mm		Flat Washer
1		14mm		Spring Washer
1	Fitting Instructions			
1	Tilt Cab Warning Sticker			
2	Indicator Wiring Harness			P/N ICHDUTRO300
SEALED IN CLEAR BAG AND TAPED TO STEEL MOUNT				

ATTACHED TO BULLBAR				
2		3/4"	UNC	Eyebolt Grade 8H/T P/N ICEYEBOLT
2		3/4"		Flat Washer
2	2 1/2"	9/16"	UNC	Bolt Grade 8H/T
2		9/16"	UNC	Nyloc Nut
4		9/16"		Flat Washer
ADDITIONS				
2	LED Indicator/Parker Lights (95202)			P/N ICLED33INDPRK
1	Steel Bullbar Mount			

GA30002005 Fitting Instruction
DUTRO WIDE CAB 2001-2006




GA30002005 Fitting Instruction
DUTRO WIDE CAB 2001-2006
DESPATCH CHECKLIST
B3HN6002SY
HINO DUTRO WIDE CAB 2001-2006



Work Order No:	
Finish:	
Transport:	
Due Date:	

OC	_____	1	Steel Mounting Bracket
OC	_____	2	3" Overrides (CA01 Plastic)
OC	_____	2	Hino Badges
WR	_____	2	Eyebolts (³ / ₄ " UNC ZP) and Washers – Fitted To Bar
WR	_____	2	2 1/2" x ⁹ / ₁₆ " UNC Bolt Grade 8H/T – Fitted To Bar
WR	_____	2	⁹ / ₁₆ " Nyloc Nut – Fitted To Bar
WR	_____	4	⁹ / ₁₆ " Flat Washer – Fitted To Bar
WR	_____	2	LED Parker Lights (ICLED33INDPRK-95202CUST) – Fitted To Bar
WR	_____	1	Bolt Kit – Taped to Mount

See other side of this page for photos of all mounts

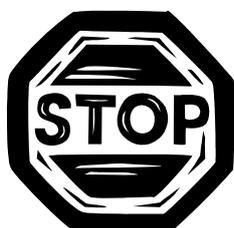

IS THIS PRODUCT "THE BEST IT CAN BE"?
IF NO FIX BEFORE CONTINUING

 Wrapper's / Checker's
 Initials Initials

ALL PARTS CHECKED AND COMPLETED BY:

NUTS AND BOLTS: _____ DATE: ___/___/___

ORDER CONTROL: _____ DATE: ___/___/___

FINAL WRAP CHECK: _____ DATE: ___/___/___


**GA30002005 Fitting Instruction
DUTRO WIDE CAB 2001-2006**



**STEEL MOUNT
(TOP VIEW)**



**STEEL MOUNT
(SIDE VIEW)**

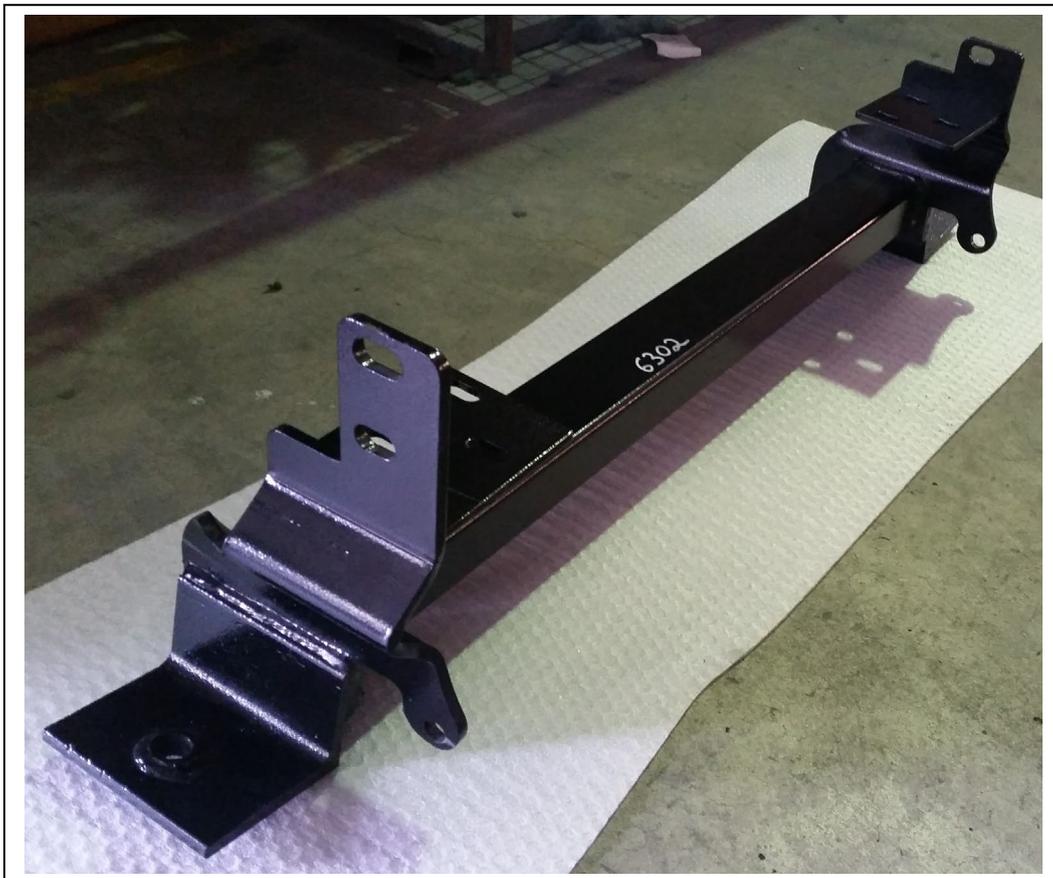

Wrapper's Initials / Checker's Initials